FIG. 1

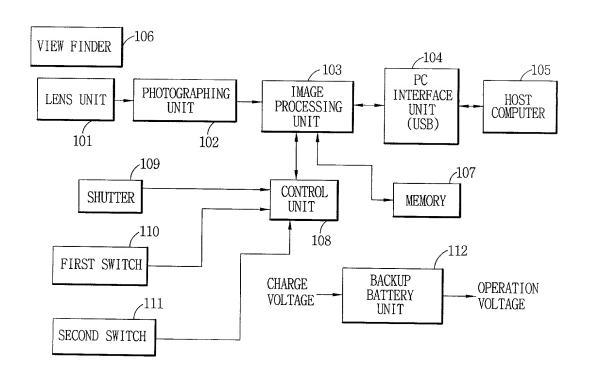


FIG. 2A

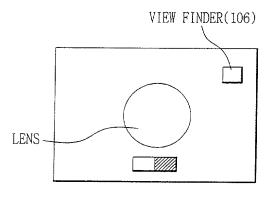


FIG. 2B

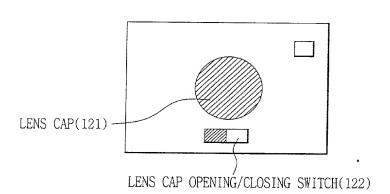


FIG. 3A

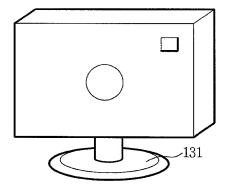


FIG. 3B

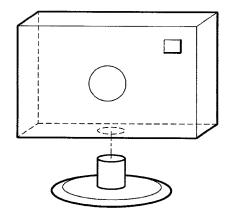


FIG. 3C

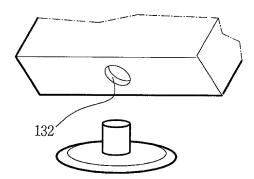


FIG. 4

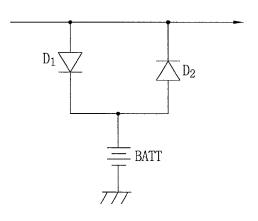
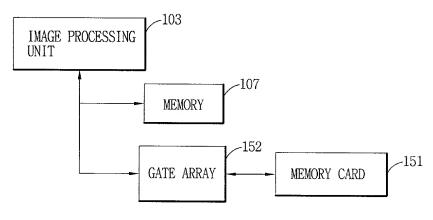


FIG. 5



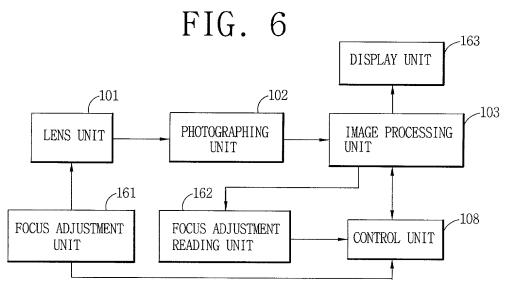


FIG. 7

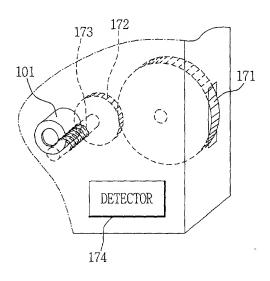


FIG. 8

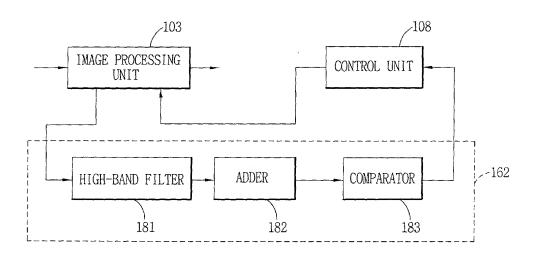


FIG. 9

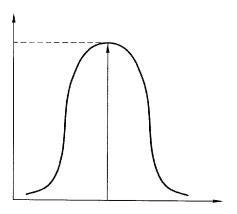


FIG. 10

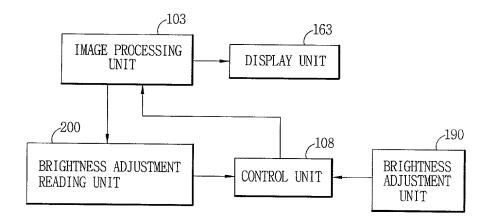


FIG. 11

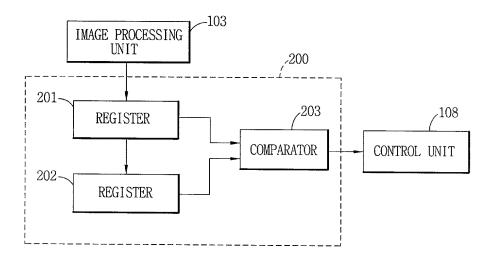


FIG. 12

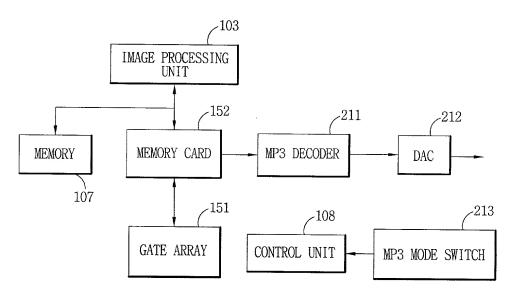


FIG. 13A

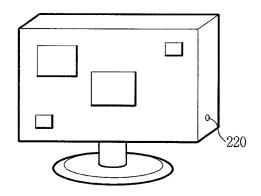


FIG. 13B


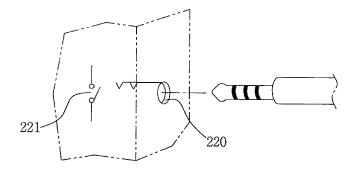


FIG. 13C

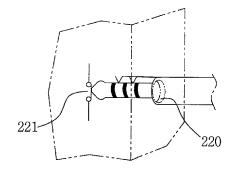

```
FIG.1
                           102; photographing unit 103; image processing unit
    101; lens unit
    104; PC interface unit 105; host computer 106; view finder 107; memory
                                                                 111; second switch
                                                 110; first switch
    108; control unit
                            109; shutter
    112; backup battery unit 충전전압; charge voltage
                                                         동작전압; operation voltage
    FIG.2
                106; view finder 121; lens cap 122; lens cap opening/closing switch
     렌즈: lens
     FIG.3
     131; holder
                   132; groove
10
    FIG.5
                           152; gate array
     151; memory card
     FIG.6
                                 162; focus adjustment reading unit
     161; focus adjustment unit
     163; display unit
     FIG.7
15
                                  173; screw
                                                 174; detector
                    172; switch
     171; switch
     FIG.8
     181; high-band filter 182; adder
                                        183; comparator
     FIG.10
                          190; brightness adjustment unit
     163; display unit
20
     200; brightness adjustment reading unit
                                                            203; comparator
                                             202; register
                          201; register
     FIG.11
                          211; MP3 decoder 213; MP3 mode switch
     FIG.12
```

FIG.13

220; jack

221; switch